

Model: BDGB-100
Pop Up Blind
 HUNTING GROUND BLIND

WARNING

- ALWAYS READ/UNDERSTAND ALL INSTRUCTIONS/WARNINGS PRIOR TO EACH USE.



Box Content:

- | | | | |
|----------|---|---------------------------|----------------|
| A | 1 | Pop Up Blind | Part # SS-100 |
| B | 4 | Ground Stakes | Part # GS-100 |
| C | 4 | Ground Stake Ropes | Part # GSR-125 |
| D | 1 | Carrying Bag | Part # CB-200 |
| E | 2 | Fiber Pole (roof support) | Part # FP-100 |
| F | 4 | Shoot-Through Mesh | Part# STM-100 |

PRODUCT TIPS & WARNINGS:

- Meets CPAI-84 fire retardent requirements. **THIS PRODUCT IS NOT FIREPROOF!!! NEVER use any type heater/heat source inside or around this blind!!**
- ALWAYS stake this blind to the ground every time this product is used.
- Always check with your state or local Conservation for rules / regulations for using ground blinds in your area.
- Use Fixed blade broad-heads ONLY. Mechanical broad-heads will deloy through the screen mesh. NEVER shoot a firearm through the mesh!! Muzzle flash/sparks will burn or melt the shoot through mesh and fabric.
- ALWAYS air out your blind for two or three days before prior to each use. This will help with scent reduction. Insure all windows are open.
- Be careful when taking blind out of carrying bag. The tent is under pressure. Always keep your head and hands clear when opening this blind.
- Insure to remove all stakes and fiber poles in the roof before taking down the blind. Insure to zip all windows and door entry closed BEFORE folding the blind away.

TAKE-DOWN INSTRUCTIONS: ALWAYS TAKE YOUR TIME!!



Remove the (2) fiber poles in the roof and remove all ground stakes first. Next, push in on one corner and lay both sides on top of each other so that the tent is flat. **1 2 3**

Pick-up the folded blind from the ground and place each hand on each side of the circle ring. FOLD the blind in HALF until it forms a "U" shape. **4 5**



Cross your hands over each other so that the blind rolls into a twist. You will notice the bottom will form a second circle with the twist. **6**

Keeping one hand on the top twist circle, reach down and grab the bottom twist circle and fold the two halves together. The blind should be in a smaller packed circle. **7**

Insert the packed blind into the carrying case. Next insert the (2) fiber poles carefully in the carrying bag. Place all ground stakes in front zipper compartment. DO NOT store or put away the blind if damp or wet. **8 9**

Pocket shown where the fiber poles are inserted into on each side. **10**

SET-UP INSTRUCTIONS: ALWAYS TAKE YOUR TIME! NEVER FORCE THE BLIND OPEN OR CLOSED.




Remove the tent and poles from the carrying case. Note: The fiber poles will be in their own bag. Remove ground stakes from front compartment of the carrying case.

Being extremely careful, remove the blind from the carrying case and all the side to un-fold on their own. Aide in guiding this blind open. NEVER have your head near the blind when opening. [Sides are under pressure]

The blind should appear as in the above image after removed from the carrying case and un-folded.

Pull open each side so that the blind makes a square shape.

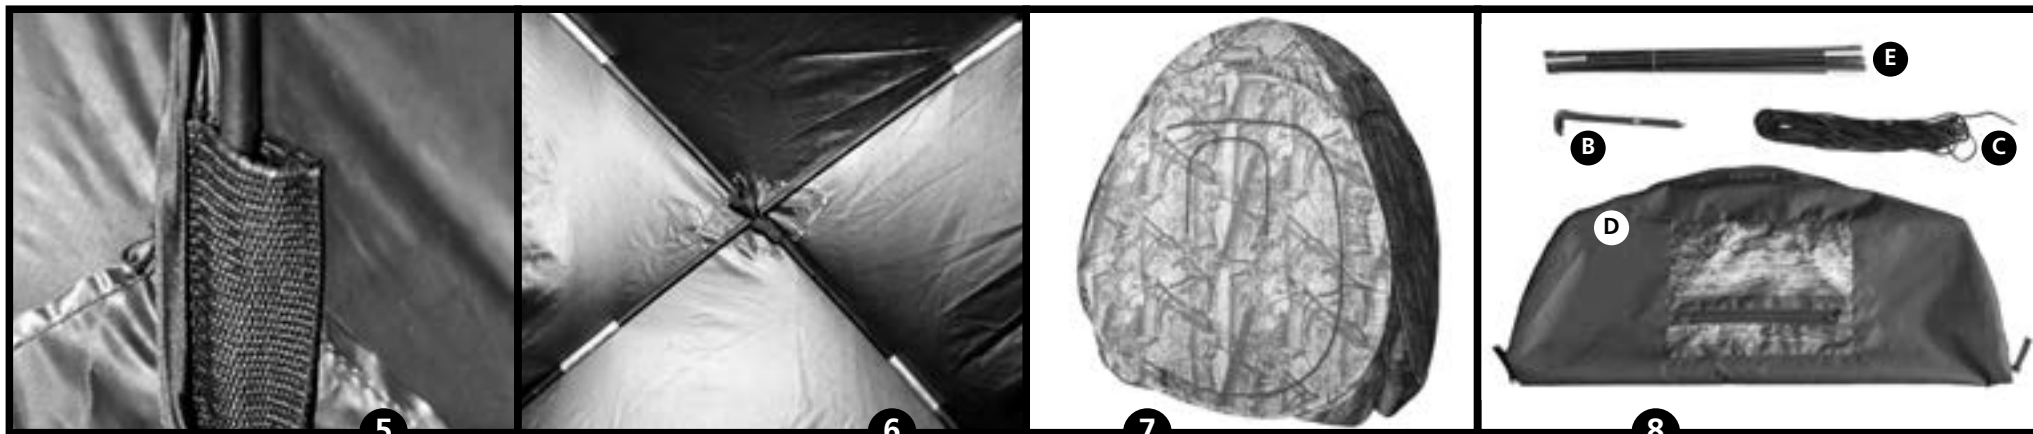

Connect each fiber pole together. Insert one end of the Fiber pole into the corner pocket and opposite end diagonally across to the other pocket. Repeat on second pole. Poles should form a "X" across the ceiling of the blind. Tie-Off the criss/cross connection in the roof. This will prevent poles from moving around. **5 6**

Shown is the final assembly.

SAFETY WARNINGS & PRODUCT TIPS

Please Read/Understand/Practice with/Follow ALL Instructions and Safety Warnings prior to each use!!!

- ALWAYS insure that ALL windows and the door opening is zipped CLOSED before putting up or taking down this ground blind!!!
- NEVER FORCE the blind or zippers open or closed!! Forcing the blind/zippers open or closed can cause the fabric/zipper to break!!
- Use caution and take extra time setting-up/taking down the blind in all conditions to prevent ripping/tearing of the fabric or possibly breaking a pole(s). DON'T FORCE IT!! ALWAYS PRACTICE WITH THIS BLIND FOR SAFE USE PRIOR TO EACH USE.
- NEVER shoot a firearm threw the shoot-through mesh or material fabric. The muzzle/barrel flash/sparks will cause the mesh/fabric to melt or burn. Insure the muzzle/barrel of the gun is completely OUTSIDE the window opening!! TIP: Know your target and what is behind it. Check local conservation for blaze orange requirements before using firearms with any ground blind. Safety First!!
- NEVER shoot mechanical broad-heads through the shoot-through mesh. The mesh will cause the broad-heads to deploy. Use fixed blade broad-heads ONLY. TIP: Know your target and what is behind it. Reminder: The arrow is below your sights. Safety First!!
- ALWAYS inspect your blind before and after each use..
- ALWAYS keep your head/face AWAY when setting-up or taking down this product. Sides are under pressure!!
- Stake down the ground blind during each use. ALWAYS remove ground stakes before taking down the blind.
- Tip: Use the brush strips on the tent to conceal your blind into the environment or area you have selected. Use small light branches.
- Store in a cool dry place away from any heat sources or electrical outlets. NEVER store/pack-away any blind that is wet or damp.
- Always air out the blind with the windows open for two or three days prior to each use. This will help with scent reduction.
- Always check with your state & local Conservation (DNR) for rules/regulations BEFORE using this ground blind in the field.
- Always avoid leaving or setting up the blind in direct sunlight. The sunlight will fade the fabric over a period of time.
- THIS IS NOT A CHILDREN'S TOY OR PLAY AREA. NEVER allow child/children to play inside or around this ground blind for any reason. ALWAYS have constant adult supervision when a child/children is using this product. ALWAYS keep out of reach of children.
- DO not use any ground blind during any adverse conditions that may produce strong winds, rain, snow, sleet, or lightening.
- NEVER allow any material to cover your face, nose, or mouth which could/can cause or lead to suffocation or death.
- NEVER USE heater(s), smoke, matches, lighters, lanterns, burning any combustibile material, stoves, grills, heat sources, electrical outlets, electrical equipment that use a power source, candles, open flames, INSIDE/NEAR/AROUND/OR BY ANY GROUND BLIND FOR ANY REASON AT ANY TIME. Heaters/ Fire can cause carbon-monoxide poisoning. NEVER sleep or fall asleep inside any ground blind. Be alert of your surroundings at all times.
- NEVER store or use any flammable or combustibile materials inside, near, or around any ground blind.
- NEVER use/re-fuel any combustibile container, fuel burning product, or any type of motor vehicle inside/near/around this product.
- NEVER leave any ground blind near or around any open fire/campfires. Sparks from any fire can cause the tent to burn/melt or catch fire. ALWAYS store/ use in a secure location free of any heat sources or open/contained fires.
- This blind meets the CPAI-84 flammability requirements. The material in this blind is made up of fire retardant material. This blind is NOT FIREPROOF!!! This blind will burn, melt, or catch fire if left in direct contact with a open flame or heat source for any period of time. Application of any foreign substance to the fabric may render the fire retardant material inactive. Failure to adhere to this warning can result in serious bodily injury or death.
- TIP: If the zipper is tight to zip open or closed, push the side panel in and zip open or closed. This relieves the pressure on zipper and side fabric.