


**Model: BDTRS-300**  
**Roof Kit/Blind**  
 Tripod Accessory



**WARNING**

- When hunting from any treestand, falls can occur at any time which can cause serious injury or death. Read, Understand and Follow ALL instructions and warnings prior to each use.
- Insure ground under the Foot Plates of Tripod is firm and level. Inspect all parts/sections to insure all are secured and free of damage or wear before leaving the ground.

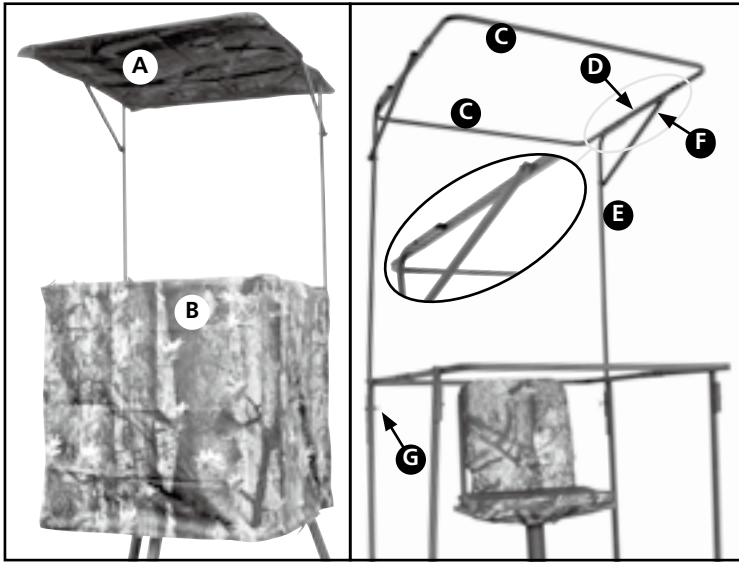

**PACKING LIST:**

<b>A</b>	1	Cover	Part # TRC-1010
<b>B</b>	1	Blind	Part # BDTB-100
<b>C</b>	2	Top Frame Section	Part # TFS-110
<b>D</b>	2	Link Bar	Part # LB-100
<b>E</b>	2	Support Bar	Part # SF-110
<b>F</b>	2	Cross Support Tube	Part # CSB-051
<b>G</b>	2	6mm T-Bolt	Part # 7035
	8	6mm x 1 - 5/8" Bolt	Part # 1013
	2	6mm x 1" Bolt	Part # 1010
	10	6mm Locknut	Part # 2010

**Note:** 1. The Cover **A** or Blind **B** is NOT warranted. Call Big Dog Treestands for purchase of replacement. 2. The Camo side of the cover **A** must face TOWARD the ground (↓). The Black side of Fabric Cover is UP (↑).

**ASSEMBLY INSTRUCTIONS**

1. [Note: Refer to tripod instructions/warnings for proper assembly/set-up/removal procedures of the tripod prior to each use and prior to installation of the Roof Kit.] Insert (1) Link Bar **D** into EACH end of (1) Top Frame Section **C** and align the holes on each side (Note: Align to the first hole on the Link Bar). Next, place (1) Support Bar **E** to the side (outside of the fabric area) and align the hole near the bend area on the Support Bar **E** with the aligned holes of the Link Bar **D** and the Top Frame Section **C**. Secure all (3) components together using (1) 6mm x 1-5/8" bolt and locknut. Insert (1) 6mm x 1-5/8" bolt into the second hole on the Support Bar and through the Link bar and secure using (1) 6mm locknut. Repeat on opposite side. Next, insert the remaining Top Frame Section into the ends of the Link Bar(s) **D**, align holes with each and secure using (1) 6mm x 1" bolt and locknut on each side. Install the Roof Fabric to the assembly, insure the fabric is fitted into the pocket areas of the Roof Fabric. Note: Camo side should be facing DOWN. Important: Remove 6mm x 1" bolts and slide Top Frame Section INWARD to fit the Roof Fabric correctly (if needed)- then re-install and secure bolts and locknuts.
2. Place (1) Cross Support Tube **F** to the outside of the Support Bar (E) and to outside of the Link Bar **D** (Note: 2nd hole on the end that is secured with (1) 6mm x 1" bolt/locknut). Align the holes and and secure each end with (1) 6mm x 1-5/8" bolt and locknut. Repeat on opposite side. Next, insert the assembled Roof Cover into the (2) pre-welded tubes on the shooting rails support s on the tripod. (Note: Install the (2) Support Bar(s) **E** into the shooting rail supports OPPOSITE side of the front/ladder leg of the tripod. Bolt (1) T-Bolt into each pre-welded nuts on the shooting rail supports to hold the roof cover into location. DO NOT over-tighten T-Bolts.
3. Insure ALL bolts on the Roof Assembly and Tripod are securely fastened. Refer to the strap buckle threading instructions to fasten all straps on Roof Fabric. Important: Insure to oil/lubricate or treat ALL hardware with a protective sealant prior to each use or as needed to prevent rust or corrosion.

